

Trillingsdemper Montage Demontage gereedschapset voor volkswagen 1.8 & 2.0 TFSi

Productcode: T10531-5467
Beschikbaarheid: 1



Prijs: 189,00 €

Omschrijving

Trillingsdemper-gereedschapset voor VAG 1.8 & 2.0 TFSi

Voorkomt het draaien van het kettingwiel van de distributieketting tijdens het demonteren en monteren van de trillingsdemper

Geschikt voor Volkswagen, Audi, Skoda en Seat met 1.8 en 2.0L TFSI-motoren met kettingaandrijving

motorcodes 1.8L TFSI :

BPU , BYT , BZB , CABA , CABB , CABD , CDAA , CDHA , CDHB , CJEB , CJED , CJEE , CJSA , CJSB , CYGA , CJSA , CJSB , CJSC , CJEB , CJEE , CJED , CYGA , CDAC , CGYA , DAJA , DAJB

motorcodes voor 2.0L TFSI:

CAWB , CBFA , CCTA , CCZA , CCZB , CCZC , CDNB , CDNC , CDND , CESA , CETA , CFKA , CHHA , CHHB , CHHC , CJXA , CJXB , CJXC , CJXE , CJXF , CJXG , CJXH , CULA , CFKA , DEDA , CHJA , CAWA , CCZC , CCZD , CPSA , CJKA , CJKB , CNCB , CNCD , CESA , CETA , CFPA , CNCD , CPLA , CNCE , CYNB , CYPB , CULB , CULC , CNCB , CNCE , CPSA , CULC , CULC , CYCB , CYPB ,

CYPB , CYRB , CYRC , CWZA ,

gereedschap voor het vasthouden van trillingsdempers, te gebruiken als OEM T10531 / 1

krukaspoelie overspanningsbout, te gebruiken als OEM T10531 / 2

moer voor gereedschap voor het vasthouden van trillingsdempers, te gebruiken als OEM T10531 / 3

adapterstuk voor gereedschap voor het vasthouden van trillingsdempers, te gebruiken als OEM T10531 / 4

Te gebruiken als OEM1 T10531/1 | T10531/2 | T10531/3 | T10531/4 Audi

Te gebruiken als OEM2 T10531/1 | T10531/2 | T10531/3 | T10531/4 Seat

Te gebruiken als OEM3 T10531/1 | T10531/2 | T10531/3 | T10531/4 Skoda

Te gebruiken als OEM4 T10531/1 | T10531/2 | T10531/3 | T10531/4 Volkswagen

Geschikt voor volgende modellen

Modellen :

AUDI

A1/A1 Sportback, A3 Cabrio, A3 Saloon, A3 Sportback, A3/A3 Sportback, A4, A4 allroad, A4 quattro, A5 Cabriolet, A5 Coupe, A5 Sportback, A6, A6 quattro, A7, A8, Q3, Q5, Q7, S1 Sportback, S1/S1 Sportback, S3 Cabrio, S3 Saloon, S3 Sedan, S3 Sportback, S3/S3 Sportback, TT

Met Motor :

1,8 TFSI BPU, BYT, BZB, CABA, CABB, CABD, CDAA, CDHA, CDHB, CJEB, CJED, CJEE, CJSA, CJSB, CYGA, DAJB 2007 - 2019

1,8 TFSI Ultra CYGA 2015 - 2019

1,8 TFSI/TFSI Ultra CYGA 2014 - 2018

2,0 45 TFSI CHHC, CYRB 2019 - 2021

2,0 Hybrid CHJA 2011 - 2015

2,0 S CJXG 2014 - 2018

2,0 TFSI CAWB, CBFA, CCTA, CCZA, CCZC, CDNB, CDNC, CESA, CETA, CHHB, CHHC, CJXB, CJXC, CJXG, CNCD, CNCE, CPSA, CULB, CULC, CWZA, CYNB, CYPB, CYRB, CYRC 2007 - 2019

2,0 TFSI FlexFuel CFKA 2009 - 2015

2,0 TFSI FSI CNCB, CNCD 2012 - 2017

2,0 TFSI MPI CNCB, CNCD 2012 - 2017

FORD Transit 2,2 TDCi CYRB 2011 - 2014

SEAT

Alhambra, Altea/Altea XL, Exeo, Ibiza, Leon, Leon ST, Toledo 1,8 TFSI BYT, BZB 2006 - 2009

Met motor :

1,8 TSI BYT, BZB, CDAA, CDHA, CDHB, CJSA, CJSB 2007 - 2018

1,8 TSI Cupra DAJA 2015 - 2017

1,8 TSI FR CDAA 2011 - 2013

1,8 X-PERIENCE CJSA, CJSB 2014 - 2018

2,0 Cupra CJXA, CJXC, CJXE, CJXH 2013 - 2019

2,0 Cupra R CJXG 2017 - 2018

2,0 TFSI CCZB, DEDA 2009 - 2018

2,0 TFSI FR (Cupra) CCZB 2009 - 2013

2,0 TSI CCZA, CDND 2010 - 2015

2,0 TSI Freetrack CCZB 2009 - 2015

SKODA Octavia II, Octavia III, Superb II, Superb III, Yeti, Yeti Outdoor

1,8 TSI BZB, CDAA, CDAB, CJSA, CJSB, CJSC 2007 - 2018

2,0 RS 162 CHHB 2014 - 2017

2,0 RS 169 CHHA 2017 - 2018

2,0 RS 230 CHHA 2016 - 2017

2,0 TSI CCZA, CHHB, CJXA 2009 - 2019

2,0 vRS CCZA, CHHA, CHHB 2008 - 2018

VOLKSWAGEN

Amarok, Arteon, Beetle/Coccinelle/Maggiolino, CC, Eos, Golf V, Golf VI, Golf VI Cabrio, Golf VI Estate, Golf VII, Golf VII Alltrack, Golf VII Estate, Golf VII Wagon, Jetta, Passat, Passat Alltrack, Passat CC, Polo, Scirocco, Sharan, Tiguan, Touareg, Touran, Transporter T5, Transporter T6

1,8 GTi DAJA, DAJB 2014 - 2018

1,8 TSI BZB, CDAA, CDAB, CGYA, CJSA, CJSB, CJSC 2007 - 2021

2,0 GSR CPLA 2013 - 2014

2,0 GTI CCZB, CHHA, CHHB, CULC 2012 - 2018

2,0 GTI 40 CJXE 2016 - 2017

2,0 GTI 40 Years CJXE 2016 - 2017

2,0 GTI Clubsport CJXE 2015 - 2016

2,0 GTI Clubsport S CJXG 2016 - 2017

2,0 GTI FSI CAWB 2007 - 2008

2,0 GTI Performance CHHA 2013 - 2017

2,0 GTI TSI CCZB 2009 - 2013



2,0 TFSI CFPA, CJKA, CJKB 2010 - 2019

2,0 TFSI 300 CFPA 2012 - 2014

2,0 TSI CAWA, CAWB, CBFA, CCTA, CCZA, CCZB, CCZC, CCZD, CHHB, CJXA, CPLA, CULA, CULC, CYRB, CYRC, DEDA 2007 - 2023

2,0 TSI R CJXB, CJXC, CJXG 2013 - 2018

Product galerij

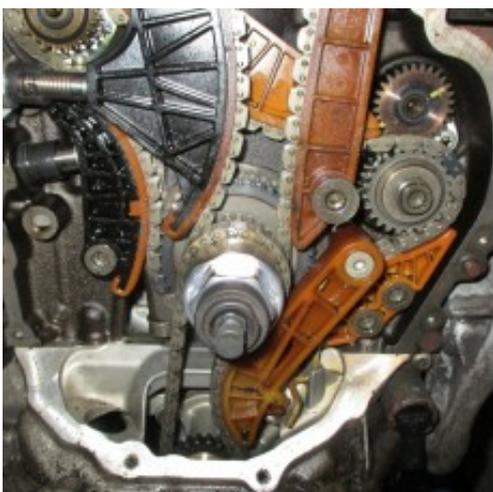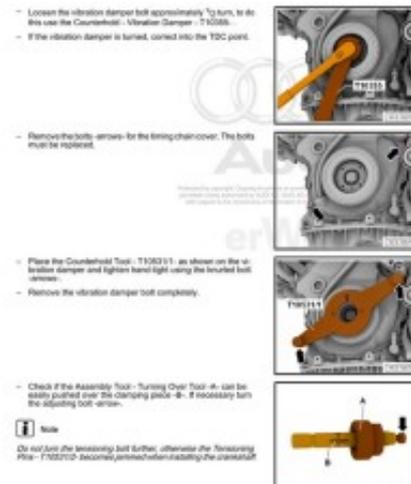







- Install the Torquing Pin - T102112 - in the crankshaft and with a "Clock-open and re-catch-in" tighten hand-tight.



- Tighten the adjusting bolt - A - hand-tight, to secure the chain sprocket to the crankshaft.




- Release the locked bolt - B - Remove the Counterhold Tool - T102111 - and vibration damper - C -.



In the Crankshaft Should be Turned without the Vibration Damper

- Place the Assembly Tool - Turning Clew - Tool - D - on the timing pins and make sure using as only reference to the newly installed tooth number. The flat side of the top of the Tool sits at Top Dead Center (TDC).



- Tighten the Assembly Tool - Turning Clew Tool with the Coker Nut - E -.

